



# 2009 - 2014 FORD F-150 Super Cab


Part Number: B0026  
B1026/B2026

*This Floor Mat is designed to fit vehicles with non-flow through console.*

**TRIM LINE INSTRUCTIONS:** Floor Mat trim patterns vary per vehicle make and model. If you need assistance with your install or have any questions, please call the Manufacturer **877-572-6227**, Monday - Friday between the hours of 9 a.m. - 5 p.m. (EST).



## STEP 1

*Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.*

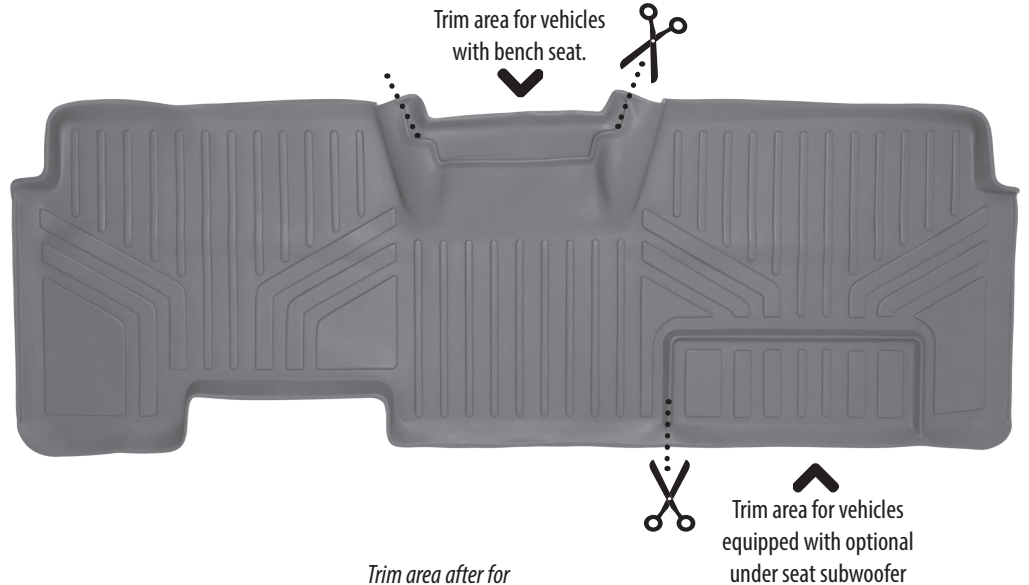

## STEP 2

*Use sharp scissors or a carpenter's knife to cut along crevice in mat to remove area at top to accommodate vehicles with a bench seat and/or trim area provided for vehicles equipped with optional under seat subwoofer.*

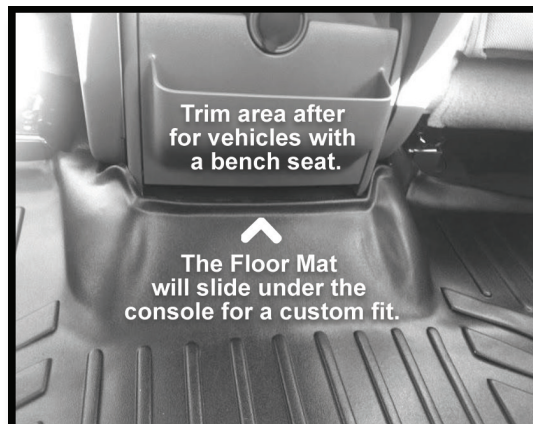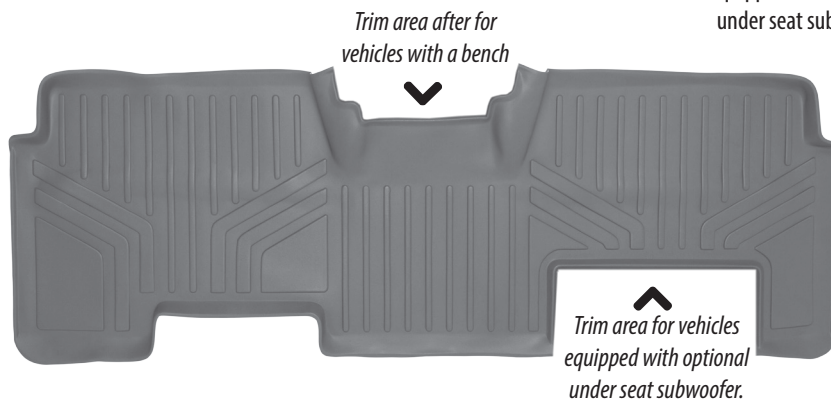

**MAT SHOWN TRIMMED FOR BENCH SEAT**