



2009 - 2014 FORD F-150 Super Cab


Part Number: B0027
B1027/B2027

This Floor Mat is designed to fit vehicles with flow through console.

TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model. If you need assistance with your install or have any questions, please call the Manufacturer **877-572-6227**, Monday - Friday between the hours of 8 a.m. - 5 p.m. (EST).

STEP 1

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the mat to regain it's custom shape after being rolled up for shipping.

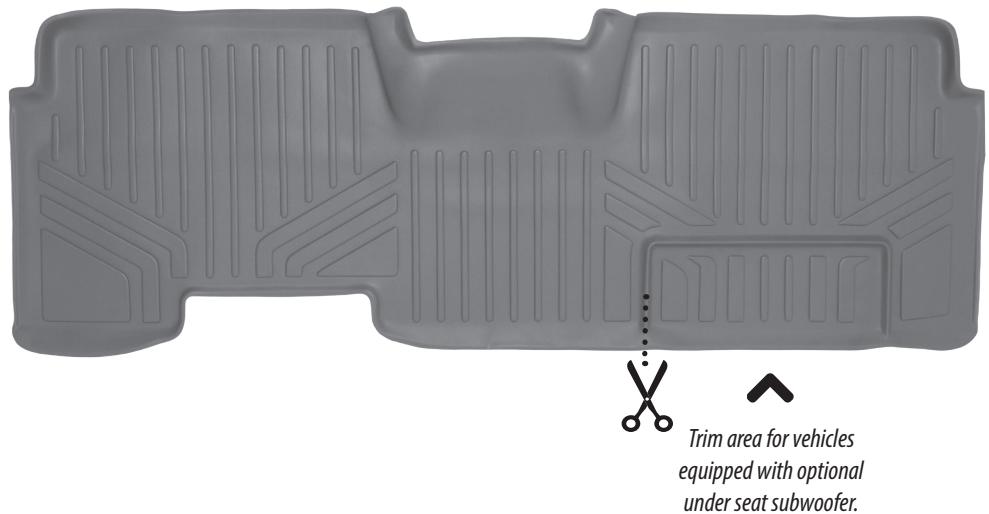

STEP 2

Use sharp scissors or a carpenter's knife to cut along crevice in mat to remove area for vehicles equipped with optional under seat subwoofer.

MAT SHOWN TRIMMED FOR UNDER SEAT SUBWOOFER

