



2008 Or Newer

Part Number: B0046
B1046/B2046

Chrysler Town & Country /Dodge Grand Caravan

TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model. If you need assistance with your install or have any questions, please call the Manufacturer **877-572-6227**, Monday - Friday between the hours of 9 a.m. - 5 p.m. (EST).

Floor Mat is designed to fit with Stow N Go standard bucket seats. Will NOT fit vehicles equipped with Swivel N Go bucket seats with table.

STEP 1


Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.

STEP 2

Use sharp scissors or a carpenter's knife to cut along crevice in mat to remove area for vehicles equipped with the super console.



Trim area provided for vehicles with the super console.

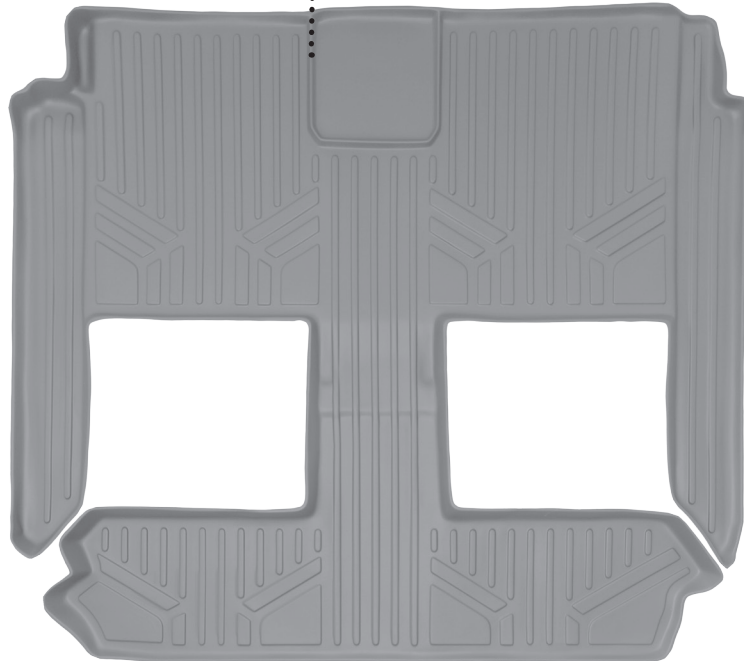

trimmed for super console

