



2007-2017

Part Number: C0185/C1185/
C2185

FORD Expedition EL/LINCOLN Navigator L

TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model. If you need assistance with your install or have any questions, please call the Manufacturer **877-572-6227**, Monday - Friday between the hours of 8 a.m. - 5 p.m. (EST).

PLEASE FOLLOW THE TRIM INSTRUCTIONS, IF YOUR CAR HAS A CENTER CONSOLE.


STEP 1

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the mat to regain it's custom shape after being rolled up for shipping.

STEP 2

Use sharp scissors or a carpenter's knife to cut along crevice in mat to remove area at top of mat to accommodate vehicles with a center console.

This piece should be trimmed to accommodate vehicles with a center console

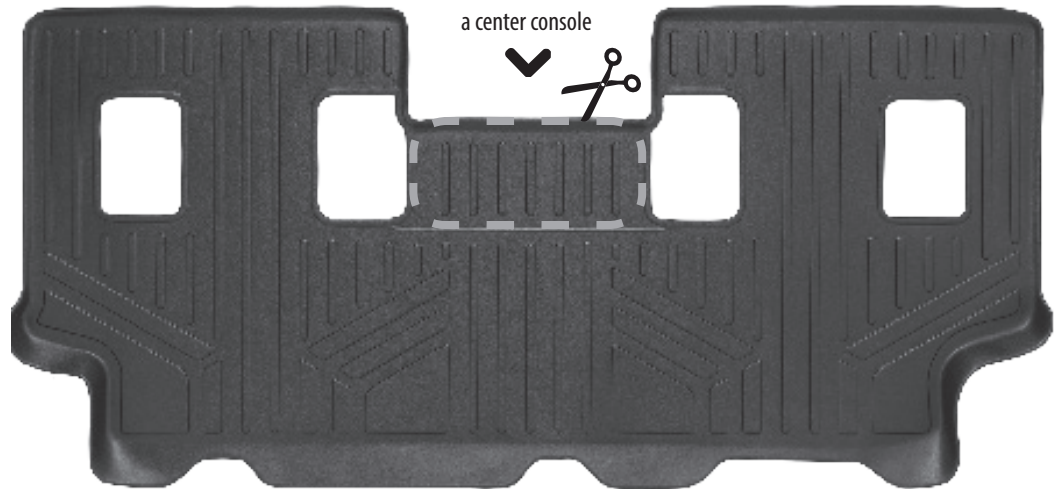

Trimmed area AFTER for vehicles with a center console

