



# 2007 - 2014 Chevrolet Tahoe (Does Not Fit XL)


Part Number: D0045  
D1045/D2045

**TRIM LINE INSTRUCTIONS:** Floor Mat trim patterns vary per vehicle make and model. If you need assistance with your install or have any questions, please call the Manufacturer **877-572-6227**, Monday - Friday between the hours of 8 a.m. - 5 p.m. (EST).

## STEP 1

*Remove Floor Mat from box and allow it to lay out in a warm area. This allows the mat to regain it's custom shape after being rolled up for shipping.*

*Dotted-lines shows trim lines for different configurations*

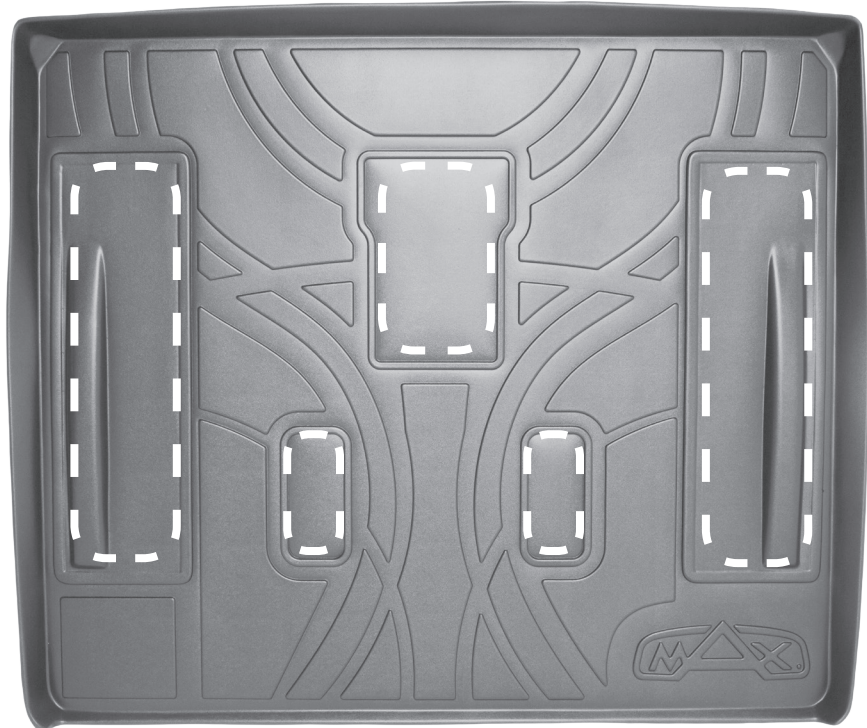

## STEP 2

*Use sharp scissors or a carpenter's knife to trim around prescored cut out for seat brackets and vehicles equipped with 3rd Row Seating. Trim cutouts appropriate for your vehicle features/options.*

*Mat trimmed showing all configurations available.*

